MASON-LITE
by MFI • Masonry Fireplace Industries, Inc

Mason-Lite™ Fireplaces
Hearth Rebar Hole Locations

Rebar locations

- Lay-out the position of the fireplace and drill holes where the rebar will be located. Secure eight #3 rebar 4 inches into concrete foundation with ITW Epoxy or Simpson Epoxy.
- Follow manufacturer's instructions for installation of rebar into slab.
- For combustible floors please refer to the installation instructions.

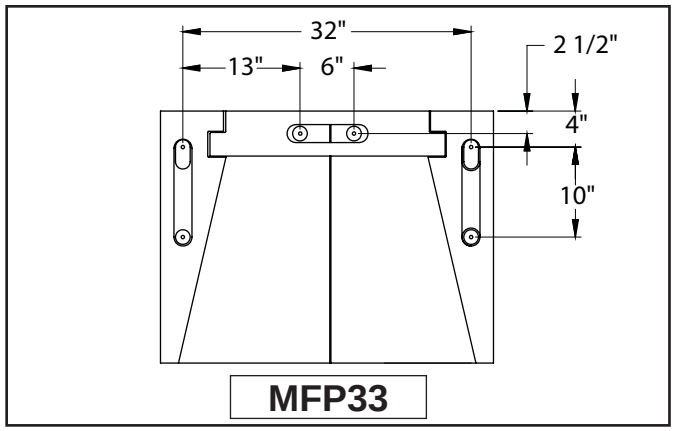

MFP33

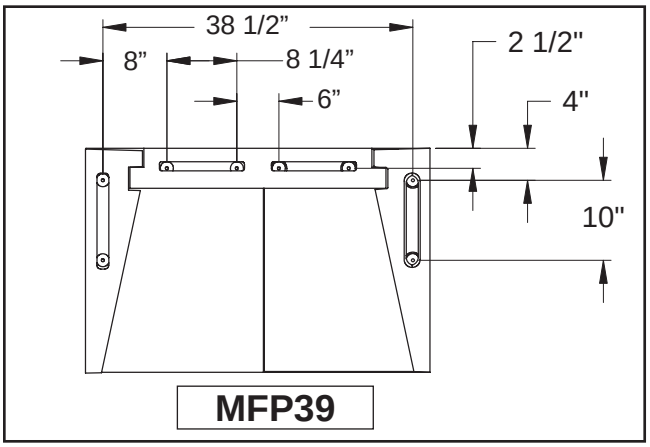

MFP39

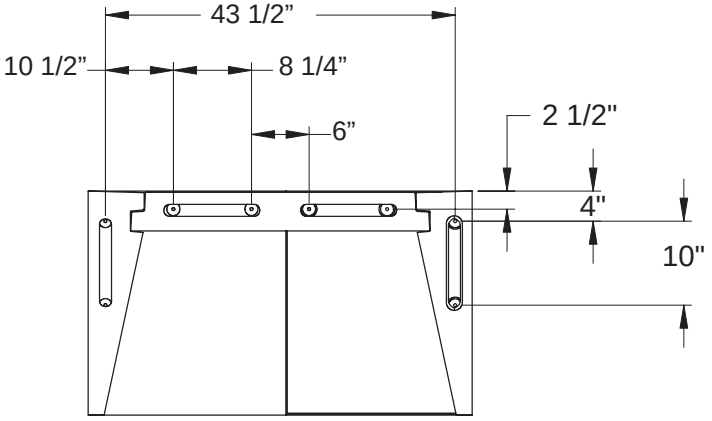

MFP44

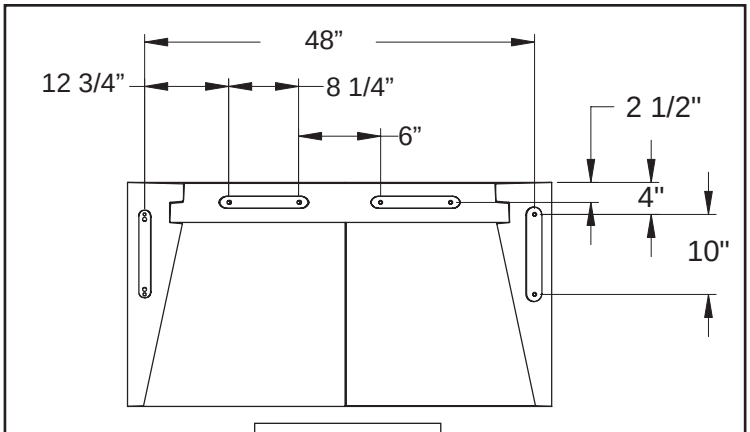

MFP49

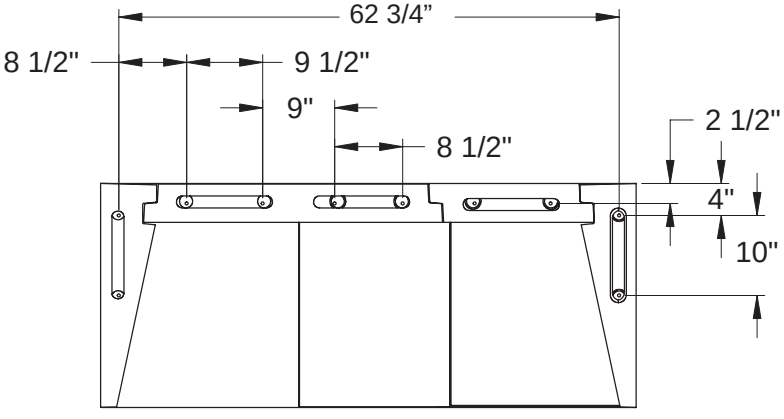

MFP63

MFPST43

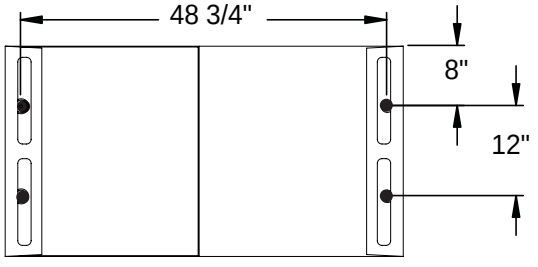

REV 08/09/24